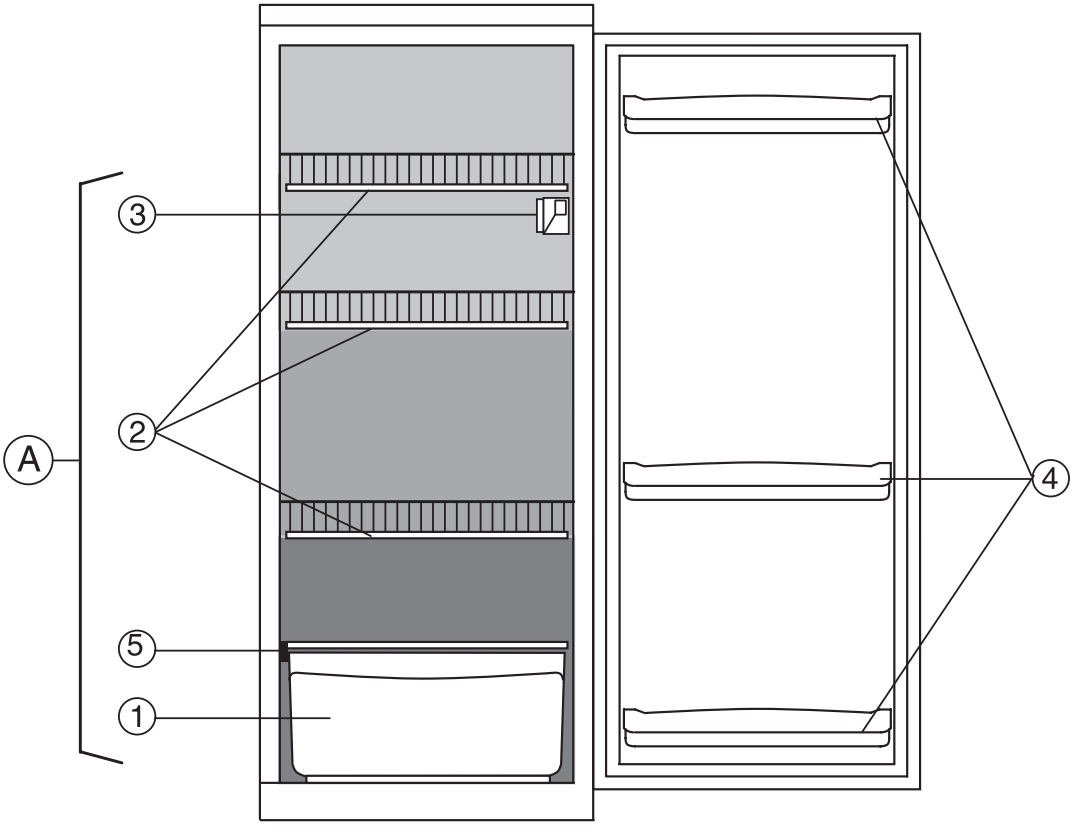

A. Refrigerator compartment

1. Crisper drawer
2. Shelves / Shelf area
3. Thermostat control knob/light
4. Shelves
5. Rating plate (at the side of crisper drawer)

Least cold zone
Intermediate temperature zone
Coldest zone

Notes: the number of shelves and type of accessories may vary, depending on the model.
All shelves and racks are removable.

Important: refrigerator accessories must not be washed in a dishwasher.

Refrigerator compartment controls

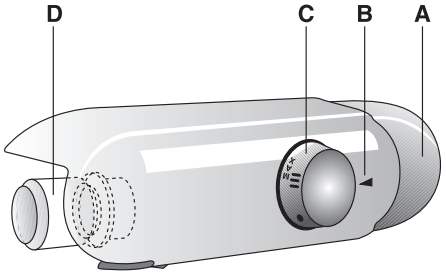

A. Light switch cam

B. Thermostat control reference

C. Thermostat knob

D. Light bulb (max 15 W)

Thermostat set to **MIN**: **minimum** refrigeration.

Thermostat set to **MED**: **medium** refrigeration.

Thermostat set to **MAX**: **maximum** refrigeration.

Recommended thermostat setting: Med position.

Optimal performance is obtained at temperatures between +10°C and +32°C. The refrigerator can nonetheless tolerate temperature peaks up to +38°C.

Note: the ambient air temperature, the frequency of door opening and the position of the appliance can affect the internal temperatures of the refrigerator. These factors must be taken into account when setting the thermostat.